

QUICK STARTUP

DUAL AIR BED MATTRESS ASSEMBLY

Freedom-Air Digital Comfort Sleep System

FOR THE BEST REST OF YOUR LIFE

1. Carefully remove Air Bed components from cartons. Avoid use of knives and box cutters. Bed is assembled from bottom up.

2. If using foundation, setup foundation on frame or bed legs.

3. Unzip the Bottom & Sides Dish from Top Cover (note: some Top Covers have another zipper just under top panel to access reversable insert), and place on Foundation or Platform Bed Deck and insert Interlocking Bolsters. Insert Top to Bottom Foam Rail **A** Bolsters first. Port Hole in Head to Foot Bolsters should be positioned at head of bed for threading Control Cords in to Pump and Power Cord out to power supply. Side to Side Bolsters **B** are then inserted to form a foam frame inside the dish. If upside down or not completely unfolded Bolsters will not reach head to foot or side to side. Bolsters may bow until Air Chamber(s) are filled.

4. Place the Freedom-Air Inflator Pump into Foam Cut-Out in the Foot Bolster with Power Cord exiting Pump on right side when standing at foot of bed. Thread Power Cord out Port Hole at head of Mattress. Then thread Control Cords from outside bed into Port at the head of the bed and connect to the receptacles under the Air Pump.


5. Lay unfolded Air Chambers inside the dish with the Air Hoses exiting at bottom then thread Hoses below Air Chambers and connect the to the Freedom-Air Pump by pushing Hose barrel connectors onto Pump connectors to engage Swivel Collar and twist clockwise until Cam-Lock clicks securely into place.

Note: Optional single Chamber models utilize only one Control and Cam-Lock connector which is then only attached to one of the Pump air outlet Connectors.

6. Plug pump into surge protector and then into power supply, locate the hand controls and inflate the air cores one at a time. Only one side of Dual systems may be inflated or deflated at a time. Fill the Air Chambers until $\frac{3}{4}$ inflated. Insert the Anatomic Insert Layer evenly over top of Air Chambers, tuck F/R Flange behind zipper on Bottom Dish, the zip Top Enclosure closed and fill Air Chambers.

Notes: a) Some smooth top models do not include Anatomic Insert.
b) For models with exterior F/R Flange, fold over zipper to cover.

7. Adjust Digital Control to your preferred comfort setting and enjoy the ultimate in adjustable sleep.

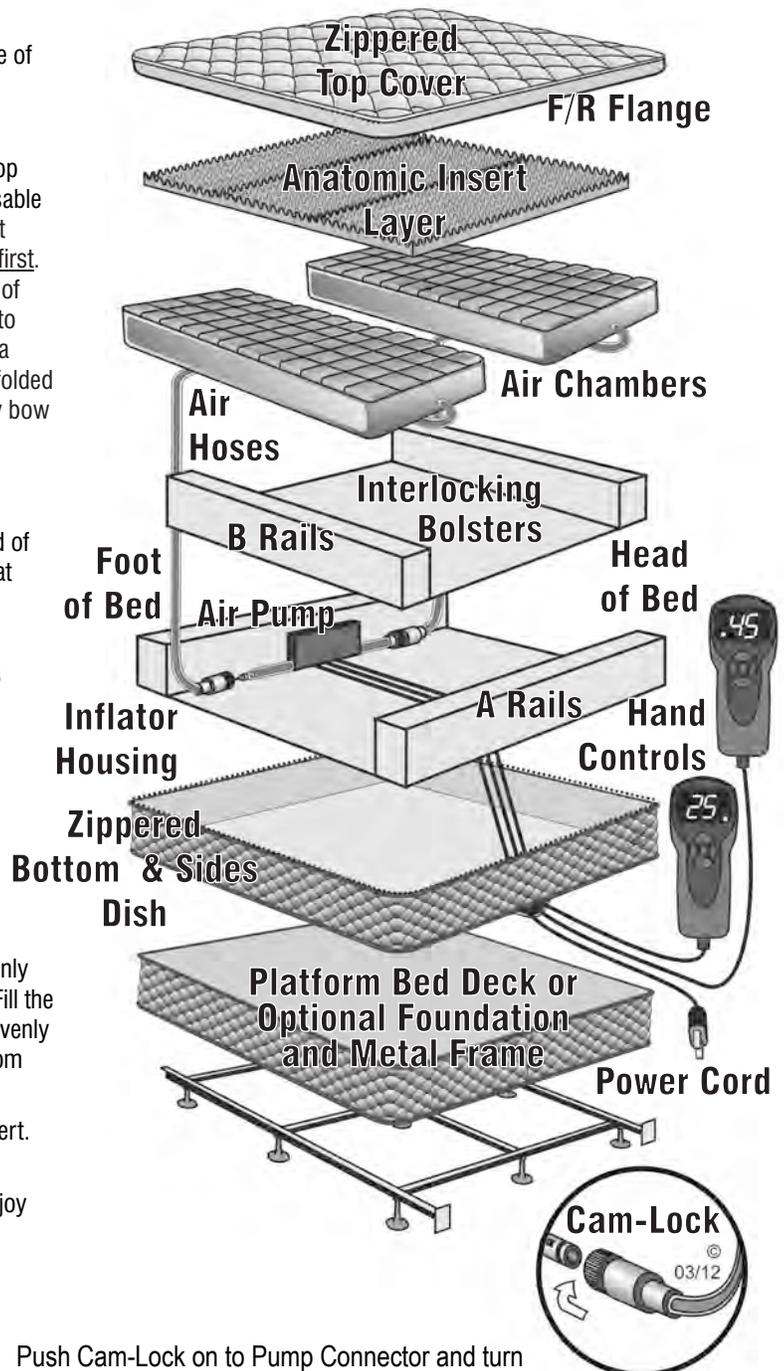

Specialty Sleep Services
530 W. Elk Pl. Denver, CO 80216
720-241-0648

Push Cam-Lock on to Pump Connector and turn swivel collar clockwise to lock & counter clockwise to unlock. You will feel Cam-Lock click into place once locked.